INSTALL GUIDE
FLC-IDS(RS)-BM1-EN

DOCUMENT NUMBER

REVISION DATE
20130523

FIRMWARE
FLC-IDS(RS)-BM1

HARDWARE
FLRSBM1

ACCESSORIES
PROGRAMMING CABLE FLPROG (REQUIRED)
FLRF1/2 (OPTIONAL)
CARLINK ASCL2 (OPTIONAL)

NOTICE The manufacturer will accept no responsability for any electrical damage resulting from improper installation of this product, be that either damage to the vehicle itself or to the installed device. This device must be installed by a certified technician. Please review the Installation Guide carefully before beginning any work.

BEFORE INSTALLATION
1- Connect module to computer
2- Login to Weblink account
3- Flash firmware to module (module is not preloaded with firmware)
4- Use accessories accordingly (accessories are sold separately)

Automotive Data Solutions Inc. © 2013

NOTES

1 This firmware covers Automatic Transmission (AT) vehicles only.

MAKE	MODEL	YEAR	INSTALL TYPE	FEATURES																			
				REMOTE START FROM OEM REMOTES	SECURE TAKEOVER**	DATA IMMOBILIZER BYPASS	ARM OEM ALARM	DISARM OEM ALARM	DOOR LOCK	DOOR UNLOCK	PRIORITY UNLOCK	TRUNK/HATCH RELEASE	POWER LIFTGATE	PARKING LIGHT CTRL	RAP SHUTDOWN CTRL	TACHOMETER STATUS MONITORING	BRAKE PEDAL STATUS MONITORING	VSS STATUS MONITORING	GLOW PLUG STATUS MONITORING	DOOR STATUS MONITORING	TRUNK STATUS MONITORING	HOOD STATUS MONITORING*
BMW	1 Series PTS AT	08-13	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	3 Series PTS AT	06-11	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	5 Series PTS AT	05-10	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	6 Series PTS AT	05-10	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	1M PTS AT	11	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	M3 PTS AT	08-12	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	M5 PTS AT	06-10	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	M6 PTS AT	06-10	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	X1 PTS AT	12-13	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	X5 PTS AT	08-13	1	•	•	•	•	•	•	•	•		•	•	•	•	•	•		•	•	•
	X5 Diesel PTS AT	08-13	1	•	•	•	•	•	•	•	•		•	•	•	•	•	•	•	•	•	•
	X5 M PTS AT	10-13	1	•	•	•	•	•	•	•	•		•	•	•	•	•	•		•	•	•
	X6 PTS AT	08-13	1	•	•	•	•	•	•	•	•		•	•	•	•	•	•		•	•	•
	X6 M PTS AT	10-13	1	•	•	•	•	•	•	•	•		•	•	•	•	•	•		•	•	•
	Z4 PTS AT	09-13	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
MINI	Clubman PTS AT	08-13	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	Cooper PTS AT	07-13	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	Cooper Convertible PTS AT	08-13	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	Countryman PTS AT	11-13	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	Coupe PTS AT	12-13	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•
	Roadster PTS AT	12-13	1	•	•	•	•	•	•	•	•	•		•	•	•	•	•		•	•	•

* If equipped with a factory hood switch.
** If equipped with an electric E-brake and it is activated, vehicle will shudown when a door is opened during RS sequence.

BOX CONTENTS

MODULE

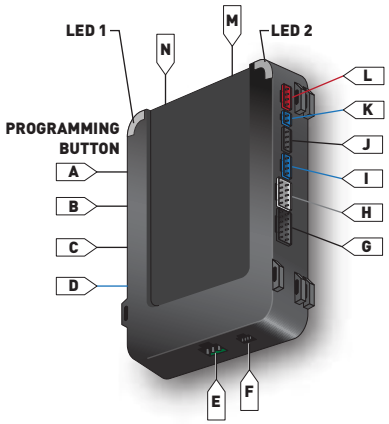

EXPANSION PACK

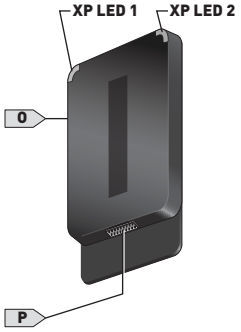

T-HARNESS 1

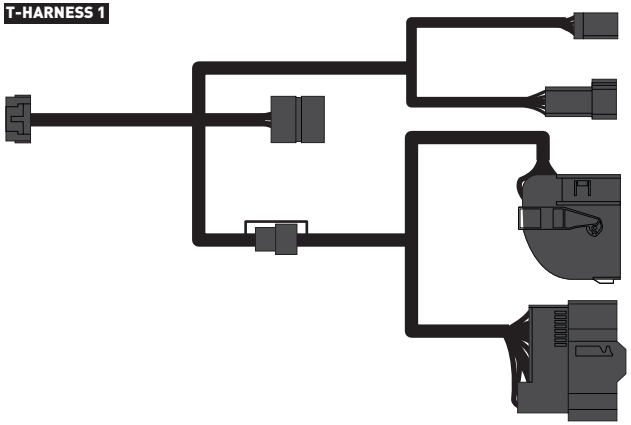

T-HARNESS 2

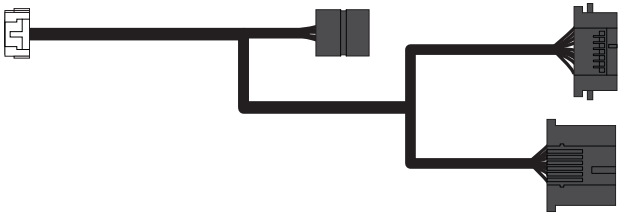

EXPANSION CABLE

10 PIN WHITE CONNECTOR

12 PIN BLACK CONNECTOR

AFTERMARKET HOOD SWITCH AND CABLE

STICKER 1

STICKER 2

THIS VEHICLE IS EQUIPPED WITH A REMOTE STARTER
TECHNICAL INFORMATION
XXX.XXX.XXXX
RENSEIGNEMENTS TECHNIQUES
CE VÉHICULE EST ÉQUIPÉ D'UN DÉMARREUR À DISTANCE

ACCESSORIES (SOLD SEPARATELY)

PROGRAMMING CABLE (REQUIRED)

RF KIT (OPTIONAL)

COMPATIBLE MODELS ONLY

TELEMATICS DEVICE (OPTIONAL)

COMPATIBLE MODELS ONLY

01

START vehicle. Verify all vehicle functionalities. If the vehicle displays error messages or any malfunction: stop the installation and service the vehicle.

02

Turn ignition to OFF position. Remove keyfob from keyport.

03

Verify all keyfob functionalities (Door Lock, Door Unlock, Trunk Release and Comfort Access System if equipped).

04

Insert the expansion pack into module.

05

Use the EXPANSION CABLE to connect the A connector to the module and the O connector to the expansion pack.

06

Connect the module to the computer with the programming cable and flash the module with the latest firmware. (F port)

07

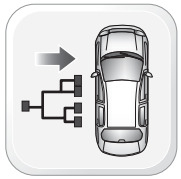

Connect and secure every connector to the vehicle, as shown in STEP 1 of the WIRING DIAGRAM.

08

WARNING: Any vehicle harness that is disconnected during installation, must be re-connected before performing any system tests. Failure to comply will result in vehicle displaying error messages. An OEM scantool will be required to clear the error messages.

09

START vehicle. Verify all vehicle functionalities.

10

WARNING: If the vehicle displays error messages or any malfunction, stop the installation, verify every connection and if the problem persists, call technical support.

11

Turn ignition to OFF position. Remove keyfob from keyport.

12

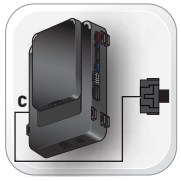

Connect the C connector to the module, as shown in STEP 2 of the WIRING DIAGRAM.

13

Connect the P connector to the module, as shown in STEP 3 of the WIRING DIAGRAM.

14

If required, connect a compatible RF Kit, as shown in STEP 4 of the WIRING DIAGRAM.

15

If required, connect a compatible Telematics Device, as shown in STEP 4 of the WIRING DIAGRAM.

16

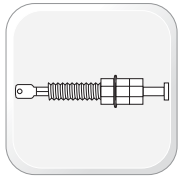

If the vehicle is not equipped with a factory hood switch, install an aftermarket hood switch as shown in STEP 4 of the WIRING DIAGRAM.

17

Put sticker 1 on a clean and visible surface in the engine bay and put sticker 2 under the dashboard near the OBDII connector.

18

Module installation procedure completed.

MODULE

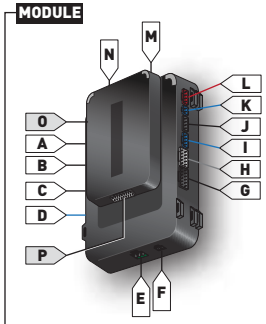

WARNING
1-TO CONNECT THE MODULE: FOLLOW STEPS 1 TO 4
2-TO DISCONNECT THE MODULE: FOLLOW STEPS 4 TO 1

STEP 1:
CONNECT THE FOLLOWING TO THE VEHICLE
START THE VEHICLE WITH THE OEM KEYFOB
TO TEST THE CONNECTIONS

A1
A2
B1
B2
C1
C2

RELAY

STEP 2:
CONNECT THE FOLLOWING TO THE MODULE

C
BLACK 20 PIN

STEP 3:
CONNECT THE FOLLOWING TO THE MODULE

P
WHITE 10 PIN
RELAY

BRAKE SWITCH

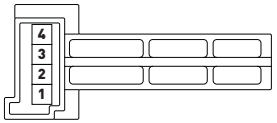

BRAKE HARNESS

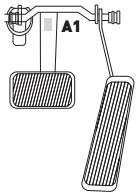

COMFORT ACCESS SYSTEM MODULE

MINI: BEHIND INSTRUMENT PANEL, DRIVER SIDE
BMW: UNDER DASH, DRIVER SIDE



B1 CONNECTOR

B2 HARNESS

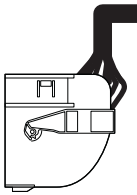

WARNING:
THESE CONNECTORS HAVE TWO [2X] LOCKING MECHANISMS. INSERT THE CONNECTOR IN ITS HOUSING AND APPLY GENTLE PRESSURE ON BOTH EXTREMITIES TO SECURE THE CONNECTION. (TWO AUDIBLE CLICKS WILL BE HEARD.)

C1 CONNECTOR



C2 HARNESS

STEP 4:
CONNECT THE FOLLOWING IF REQUIRED

H
07 GRAY/WHITE - HOOD STATUS (-) INPUT
08 GRAY/BLACK (NC)

IF NOT EQUIPPED
WITH AN OEM HOOD SWITCH,
INSTALL AN AFTERMARKET HOOD SWITCH

AFTERMARKET HOOD SWITCH (-)



F
BLACK 4 PIN - RF CABLE
RF KIT

I
BLUE 4 PIN - TELEMATIC CABLE
TELEMATIC

01

LED 1 is solid RED. Insert keyfob 1 into keyport.

02

Within 10 seconds, LED 1 will flash GREEN once (1x).

03

Remove keyfob 1 from keyport.

04

LED 1 will turn solid RED. Wait 5 seconds.

05

Insert keyfob 1 into keyport.

06

Within 10 seconds, LED 1 will flash GREEN rapidly.

07

Remove keyfob 1 from keyport.

08

WARNING: Follow steps 4, 3, 2 as shown in the wiring diagram to disconnect the module from the vehicle.

09

Connect module to computer and proceed with KLON programming.

10

WARNING: Follow steps 2, 3, 4 as shown in the wiring diagram to connect the module to the vehicle.

11

LED 1 will turn solid RED.

12

Insert keyfob 1 into keyport.

13

LED 1 will turn solid GREEN for 2 seconds.

14

Remove keyfob 1 from keyport.

15

Module Programming Procedure completed.

	CHECKLIST
01	WARNING: Vehicle engine will start many times. Test in a well ventillated area.
02	Open driver door window for easy vehicle access.
03	Close all vehicle doors, hood and trunk.
04	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
	QUESTION 1: Does the vehicle remote start?
☐	YES: Go to step 5.
☐	NO: The module doesn't detect OEM remote lock button from the vehicle communication network. Check all connection, repeat step 4 and call technical support if the problem persist.
05	Press LOCK button three times [3x] rapidly on the OEM keyfob to shut down vehicle.
	QUESTION 2: Does the vehicle shut down?
☐	YES: Go to step 6.
☐	NO: Repeat step 5. If problem persists, push vehicle start button once [1x] to shut down the vehicle and call technical support.
06	Unlock and open driver door.
07	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
	QUESTION 3: Does the vehicle remote start?
☐	YES: The module does NOT detect the door signal from the vehicle communication network. Press LOCK button three times [3x] rapidly on the OEM keyfob to shut down vehicle and call technical support.
☐	NO: Go to step 8.
08	Open hood.
	QUESTION 4: Is the orange warning sticker "Sticker 1" placed under the hood?
☐	YES: Leave hood open and go to step 9.
☐	NO: Put the mandatory orange warning sticker "Sticker 1", leave hood open and go to step 9.
09	Close all doors.
10	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
	QUESTION 5: Does the vehicle remote start?
☐	YES: Press LOCK button three times [3x] rapidly on the OEM keyfob to shut down vehicle. Go to Question 6.
☐	NO: Go to step 11.
	QUESTION 6: Is the vehicle equipped with a factory hood switch? (Inside hood latch)
☐	YES: The module does NOT detect the hood signal from the vehicle communication network. Call technical support.
☐	NO: Install the mandatory hood switch included in the kit. Repeat installation checklist.
11	Close hood.
12	Enter vehicle. Do NOT press brake pedal.
13	Close all doors.
14	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
15	Wait for the vehicle to start.
16	Press brake pedal.
	QUESTION 7: Does the vehicle shut down?
☐	YES: Go to step 17.
☐	NO: The module does NOT detect the brake pedal signal from the vehicle communication network. Press LOCK button three times [3x] rapidly on the OEM keyfob to shut down vehicle and call technical support.
17	Apply parking brake.
18	Exit vehicle.

	CHECKLIST
19	Close all doors.
20	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
21	Wait for the vehicle to start.
	QUESTION 8: Is the vehicle equipped with Comfort Access System ?
☐	YES: Touch exterior driver door handle to unlock door using Comfort Access System. Within 45 seconds, go to step 22.
☐	NO: Press UNLOCK button once [1x] on the OEM keyfob. Within 45 seconds, go to step 22.
22	Open driver door.
	QUESTION 9: Does the vehicle shut down?
☐	YES: For Z4, X5, X6: Go to step 25. YES: For 1, 3, 5, 6, X1: The module does NOT detect the parking brake signal or the unlock signal from the vehicle communication network. Call technical support.
☐	NO: For Z4, X5, X6: The module does NOT detect the parking brake signal correctly from the vehicle communication network. Call technical support. NO: For 1, 3, 5, 6, X1: Go to step 23.
23	Press and release brake pedal.
24	Push vehicle start button once [1x] to shut down the vehicle.
25	Installation checklist completed.

>>

NOTE: In Valet Mode, the Remote starter is not functional. Keyless entry, Lock and Unlock will remain functional. See RF kit user manual for alternate valet mode programming.

01

Insert keyfob into keyport.

02

Time restriction. Complete next step within 5 seconds.

03

Cycle ignition ON five times [5x OFF/ON] rapidly. Parking Light will flash once [1x].

04

Wait, Parking Light will flash once [1x] to indicate that the valet mode is ON or twice [2x] to indicate that the valet mode is OFF.

05

Turn ignition to STOP position.

06

Remove keyfob from keyport.

07

Valet Mode Programming Procedure completed.

>>

To exit valet mode: repeat steps 1 to 6.

AFTERMARKET REMOTE PROGRAMMING: NOTES	
I All aftermarket remotes must be programmed to the RF-Kit. Refer to the RF-Kit user guide for aftermarket remote features and programming procedures.	

>>

It is mandatory to exit the Module Navigation at the end of this procedure. Failure to exit the Module Navigation will drain vehicle battery. To exit the Module Navigation at any time: Follow STEP 13.

>>

Module must be programmed to the vehicle.

>>

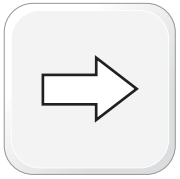

Use the Module Navigation Chart on the next page.

01

Set ignition to OFF position.

02

TO ACCESS THE MENUS: Press and hold programming button until LED 1 turns solid GREEN.

03

IN THE MENUS: Press the programming button as many times as the menu number indicates. LED 1 will flash GREEN an equal amount of times continuously.

04

TO ACCESS THE OPTIONS: Press and hold programming button until LED 1 turns solid RED.

05

IN THE OPTIONS: Press the programming button as many times as the option number indicates. LED 1 will flash RED an equal amount of times continuously.

06

TO ACCESS THE SETTINGS: Press and hold programming button until LED 1 turns solid GREEN.

07

LED 1 will flash GREEN as many times as the current (or default) setting number, continuously.

08

IN THE SETTINGS: Press the programming button as many times as necessary to access your setting. LED 1 will flash GREEN an equal amount of times continuously.

09

To return to the MENUS: exit the Module Navigation and redo the Module Navigation Procedure.

10

To save and return to the OPTIONS: Press and hold programming button until LED 1 turns solid RED.

11

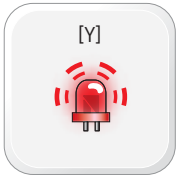

LED 1 will flash RED as many times as the current option number continuously.

12

Configure every other setting and proceed to step 13.

13

MANDATORY: EXIT MODULE NAVIGATION. Press and hold programming button for 7 seconds. LED 1 will flash RED rapidly. Release programming button. LED 1 will turn OFF.

14

Module navigation completed.

>>

Failure to exit the Module Navigation will drain vehicle battery.

MODULE NAVIGATION CHART: NOTES	[X] MENUS		[Y] OPTIONS		[Z] SETTINGS	
I Default settings are listed in bold. II Make sure the option is covered on the vehicle before attempting to change the setting.	01	CONFIGURATION	01	DISARM/UNLOCK BEFORE START	**01**	**OFF**
					02	ON
			02	RELOCK AFTER START	**01**	**OFF**
					02	ON
			03	RELOCK AFTER SHUTDOWN	**01**	**OFF**
					02	ON
			04	FORCE UNLOCK ALL ON FIRST PRESS	**01**	**OFF**
					02	ON
			05	TAKEOVER	**01**	**ENABLE**
					02	DISABLE*
			06	SECURE TAKEOVER DELAY	**01**	**45 SEC**
					02	90 SEC
					03	03 MIN
					04	04 MIN
			07	FACTORY KEYLESS RS SEQUENCE	01	DISABLE
					02	N/A
					03	LOCK + UNLOCK + LOCK
					04	**LOCK + LOCK + LOCK**
			08	MODULE RUN TIME	01	03 MIN
					02	05 MIN
					03	10 MIN
					04	15 MIN
					05	25 MIN
					06	30 MIN
					07	35 MIN
					08	**15 MIN**
			09	WAIT TO START DELAY	**01**	**02 SEC**
					02	05 SEC
					03	08 SEC
					04	10 SEC
					05	15 SEC
					06	20 SEC
					07	25 SEC
					08	30 SEC
			10-15	N/A	01	N/A
	02-07	Technical Support only	01	N/A	01	N/A

*Vehicle will shudown when a door is opened.

REMOTE STARTER ERROR CODES: NOTES	[X] NUMBER OF PARKING LIGHT FLASHES	DIAGNOSTIC
I WARNING: The following applies only when the parking lights are connected and supported by the system. II After a remote starter failure, the parking lights will flash [X] number times to indicate an error code. See table.	03	Foot brake is ON.
	04	Hood is open.
	05	Engine tach signal is lost.
	06	System is in Valet Mode.
	07	Vehicle is moving (VSS).
	08	Glow plug timeout error.
	09	RS not synchronized. Start vehicle with OEM key for 15 sec before trying a new RS sequence.
	10	N/A
	11	N/A
	12	N/A
	13	N/A
	14	N/A
	15	N/A
	16	CAN communication failure during RS sequence.

TEST MODULE		LED 1 STATUS	DIAGNOSTIC
I	DURING PROGRAMMING	Flashing RED	Missing/wrong information from firmware or vehicle.
		Solid RED	Module waiting for more vehicle information.
		Flashing GREEN	Additional steps required to complete module programming.
		Solid GREEN then OFF	Module correctly programmed.
		OFF	No activity or module already programmed.
II	DURING REMOTE START	Flashing RED	Module incorrectly programmed.
		Solid RED	Module incorrectly programmed.
		Flashing GREEN	Module correctly programmed and operational.
		Solid GREEN then OFF	Reset in progress.
		OFF	Invalid ground when running status from remote starter.
III	WITH IGNITION OFF	Flashing RED	Module incorrectly programmed or connected.
		Solid RED	Module not programmed. Waiting for more vehicle information.
		Flashing GREEN	False ground when running status from remote starter.
		Solid GREEN then OFF	Reset in progress.
		OFF	Module at rest and ready for a remote start sequence.

01 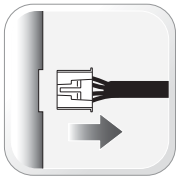

Disconnect all connectors from module except the BLACK 20-PIN connector.

02 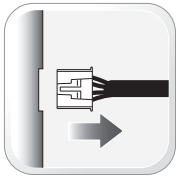

Disconnect the BLACK 20-PIN connector.

03

PRESS AND HOLD programming button while connecting the BLACK 20-PIN connector.

04

Wait, LED 1 will flash RED. RELEASE programming button.

05

LED 1 will turn RED for 2 seconds.

06

Module RESET completed.

07 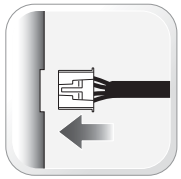

Reconnect all connectors.

08

Repeat programming procedure.

>>

Failure to follow procedure may result with a DTC or a CHECK ENGINE error message.

Automotive Data Solutions Inc. © 2013